



## SNEED-PACK ZLA-SAP Bottle Label Applicator

Thank you for your purchase of the SNEED-PACK ZLA-SAP semi-automatic label applicator. This guide will walk you through the initial setup and operation of your new label applicator.

1. Figure 1 – Remove the label reel from the frame.
2. Figure 2 – Loosen the set screw.
3. Figure 3 - Remove the flange and place the labels onto the spool.
4. Replace the flange and tighten the set screw seen in Figure 2, ensuring not to over-compress the labels.

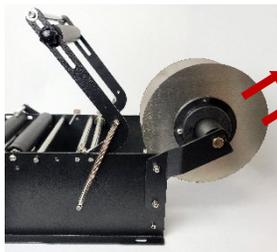

(Fig.1)

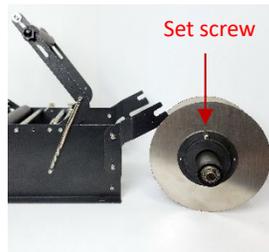


(Fig.2)




(Fig.3)

5. Use the diagram in (Fig.3) and thread the labels.

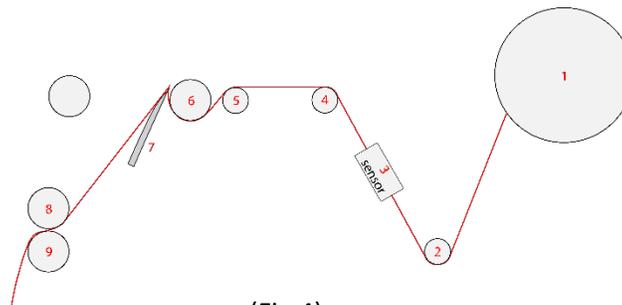


(Fig.4)

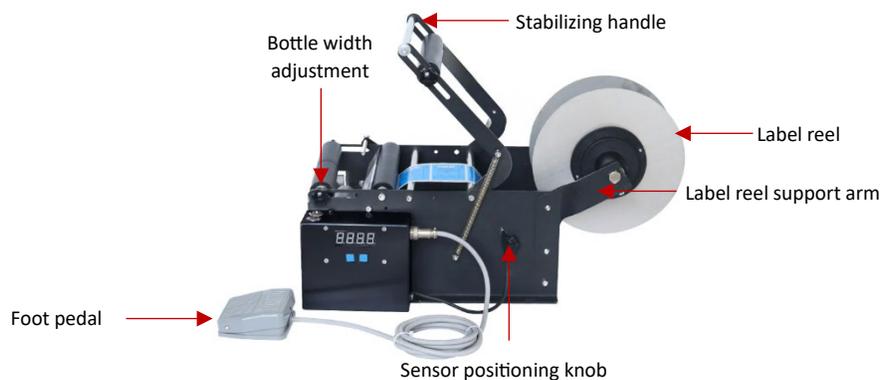

(Fig.5)



*Use the bottle guide to ensure consistent placement of labels.*

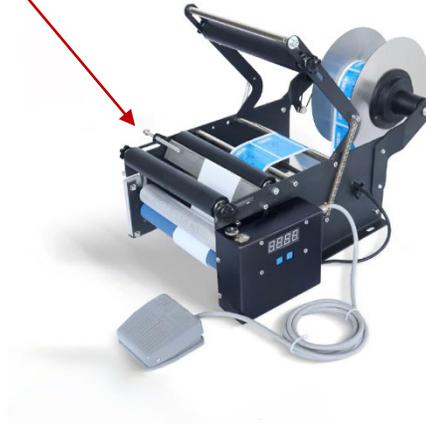

(Fig.6)



Timer setting  
+      -

6. Position the sensor between labels. Use the sensor positioning knob seen in Figure 5.
7. Using the + and – keys. Set the pull timer to ensure that the label is completely applied. The timer will begin once the sensor is triggered.
8. Press down on the foot pedal to initiate the label applicator.

For Technical support please visit us on our help desk at (<https://help.sneedcoding.com/>)



At the Sneed Coding help desk you can access a wealth of technical documentation and instructional videos on all of our products. Whether you prefer to chat with one of our seasoned pros or schedule a video meeting with a specialist, we are here and eager to assist you in any way we can!