



SNEED-PACK ZLA-ML3 Bottle Label Applicator

Thank you for your purchase of the SNEED-PACK ZLA-ML3 semi-automatic label applicator. This guide will walk you through the initial setup and operation of your new label applicator.


1. Figure 1 – Remove the label reel from the frame.
2. Figure 2 – Loosen the set screw.
3. Figure 3 - Remove the flange and place the labels onto the spool.
4. Replace the flange and tighten the set screw seen in Figure 2, ensuring not to over-compress the labels.

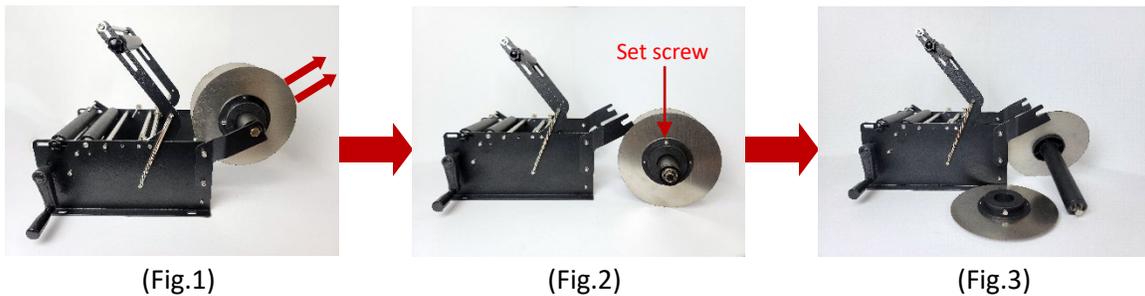

5. Use the diagram in (Fig.4) and thread the labels.

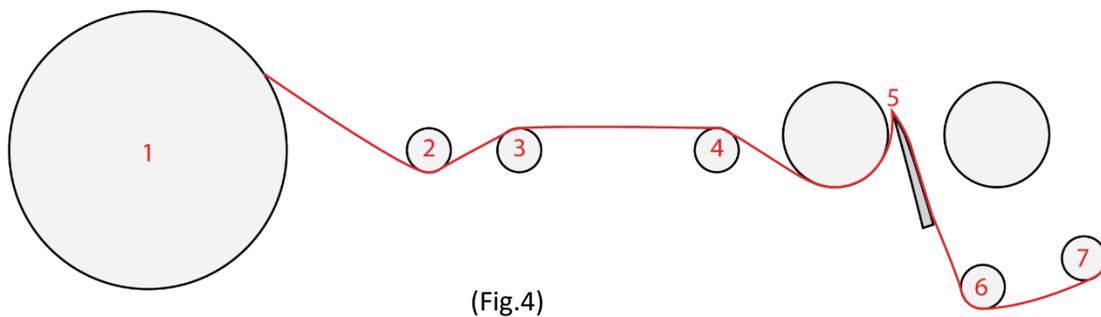


6. Attach the roll to the handle end by peeling off the first label and sticking it to the label backing. Use the label to attach the roll to the handle and turn it until taut.

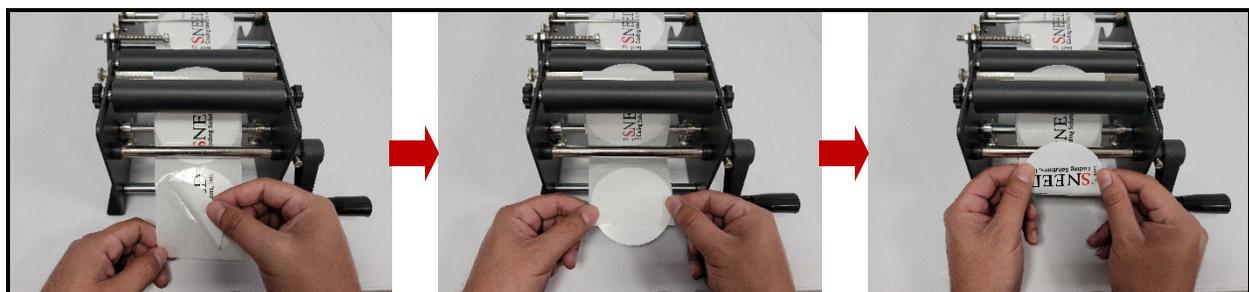

(Fig.5)

7. Rotate the tension Knob visible in Figure 6 to loosen it and adjust the spacing between the rollers to provide a secure resting position for the bottle. Repeat this step for the handle roller, positioning it between the two bottom rollers.

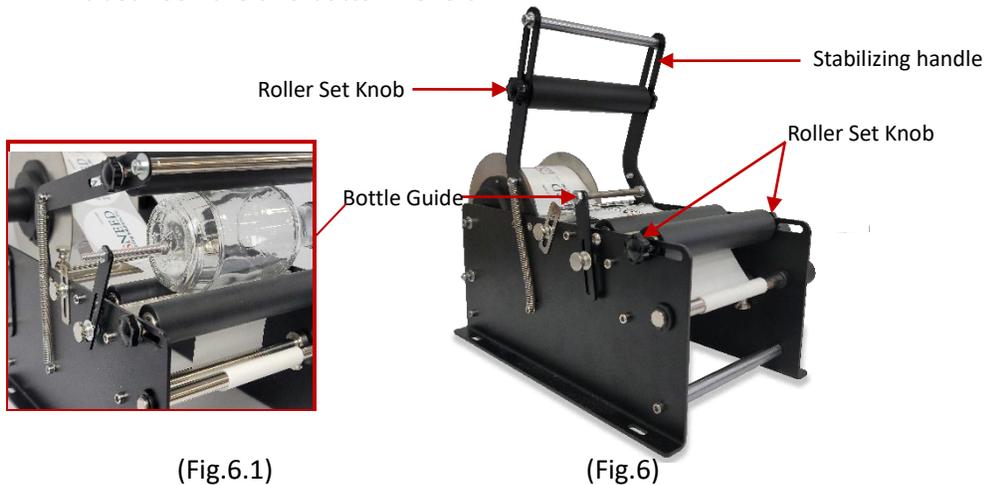

(Fig.6.1)

(Fig.6)

6. Utilize the bottle guide depicted in Figure 6.1 to guarantee the bottle's stability and consistent positioning.

7. Place the bottle onto the rollers, lower the stabilizer, and rotate the handle to affix a label.

For Technical support please visit us on our help desk at (<https://help.sneedcoding.com/>)



At the Sneed Coding help desk you can access a wealth of technical documentation and instructional videos on all of our products. Whether you prefer to chat with one of our seasoned pros or schedule a video meeting with a specialist, we are here and eager to assist you in any way we can!